

Датчики предельной вибрации LVL-B1

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(727) 345-47-04

Беларусь +(375) 257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: phb@nt-rt.ru || сайт: <https://pepperl-fuchs.nt-rt.ru/>



Vibration Limit Switch

Vibracon

LVL-B1



- Limit switch for bulk solids
- Compact device
- No calibration: easy commissioning (plug and play)
- Insensitive to build-up: maintenance-free operation
- No mechanically moving parts: no wear, long operating life
- Sensor material stainless steel: hardly any abrasion even with building materials
- Insensitive to external vibration and flow noises




Function

The device is a robust level limit switch for silos with fine-grained or coarse-grained, non-fluidised bulk solids. The various designs means the device has a wide range of applications. Certificates are also available for use in dust incensive hazard areas. Typical applications: cereals, coffee beans, sugar, animal feed, rice, detergents, dye powder, chalk, gypsum, cement, sand, plastic granules

Connection


Connection FEM 22 (E5) 3-wire DC connection (example)

- preferably for use with memory programmable controls (PLC), DI modules as per EN 61131-2
- positive signal at the electronics switch output (PNP)
- Output blocked at level limit.

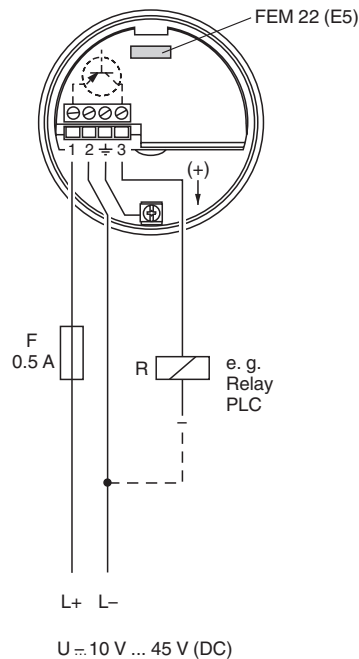

Other connection types see section electrical connection.

Dimensions

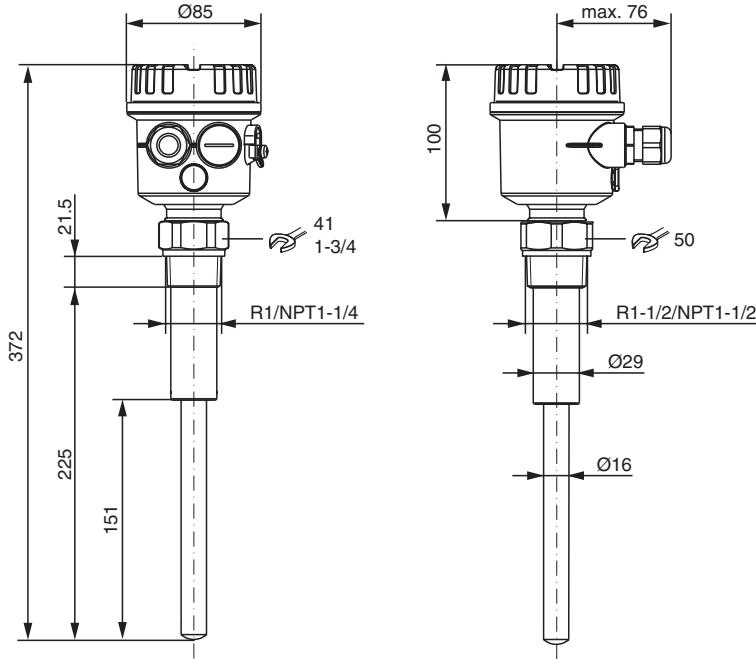

Technical Data

General specifications	
Measuring method	A piezoelectric drive excites the vibrating rod of the device to its resonance frequency. If medium covers the vibrating rod, the rod's vibrating amplitude changes (the vibration is damped). The electronics of the device compare the actual amplitude with a target value and indicates whether the vibrating rod is vibrating freely or whether it is covered by medium.
Equipment architecture	The measuring system consists of: - the device with electronic insert - a supply point - the connected control systems, switching units, signalling systems (e. g. lamps, horns, PCS, PLC, etc.)
Construction type	compact device
Operating mode	MAX = maximum safety: The device switches if the probe is covered or if the supply voltage is disconnected in a safety-oriented manner (signal on alarm). example application: overspill protection MIN = minimum safety: The device switches if the probe is uncovered or if the supply voltage is disconnected in a safety-oriented manner (signal on alarm). example application: dry-running protection
Series	Vibracon LVL-B1
Supply	
Rated voltage	U_r electronic insert FEM22 (E5): 10 ... 45 V DC electronic insert FEM24 (WA): 19 ... 253 V AC, 50/60 Hz or 19 ... 55 V DC
Ripple	electronic insert FEM22 (E5): max. 5 V, 0 ... 400 Hz
Current consumption	electronic insert FEM22 (E5): max. 18 mA
Power consumption	electronic insert FEM22 (E5): max. 0.81 W electronic insert FEM 24 (WA): max. 1.3 W
Reverse polarity protection	separation voltage 2.2 kV
Electrical specifications	
Surge protection	electronic insert FEM22 (E5) : overvoltage category III
Input	
Input signal	probe covered - small amplitude probe not covered - large amplitude
Measured variable	level (according to the mounting location and the overall length)

Technical Data

Measurement range		The measuring range depends on the mounting location of the device
Output		
Load		electronic insert FEM22 (E5): - load switched via transistor and separate PNP connection - load current: max. 45 V (cyclical overload and short-circuit protection), continuous max. 350 mA - residual current: < 100 µA (for blocked transistor) - capacitive load: max. 0.5 µF for 45 V, max. 1.0 µF for 24 V - residual voltage: < 3 V (for transistor switched through) electronic insert FEM24 (WA): - loads switched via 2 floating change-over contacts - version AC: I max. 6 A, U max. 253 V; P max. 1500 VA, cos φ = 1, P max. 750 VA, cos φ > 0.7 - version DC: I max. 6 A to 30 V, I max. 0.2 A to 125 V - the following applies when connecting a functional extra-low voltage circuit with double insulation as per IEC 1010: sum of voltages of relay output and power supply max. 300 V
Switch-on delay	t _{on}	correct switching after max. 3 s
Output signal		digital
Signal on alarm		electronic insert FEM22 (E5): output signal on power failure or in the event of device failure - < 100 µA electronic insert FEM24 (WA): output signal in event of power failure - relay de-energised
Galvanic isolation		
Input/power supply		electronic insert FEM22 (E5)
Input/Other circuits		electronic insert FEM24 (WA)
Directive conformity		
Electromagnetic compatibility		
Directive 2014/30/EU		EN 61326-1:2006 , EN 61326-2-3:2006
Low voltage		
Directive 2014/35/EU		electronic insert FEM24 (WA) : EN 61010-1:2010
Conformity		
Electromagnetic compatibility		NE 21
Degree of protection		IEC 60529:2001
Vibration resistance		EN 60068-2-27
Climate class		EN 60068, part 2-38, fig. 2a
Measurement accuracy		
Measuring frequency		700 ... 800 Hz
Switching time		when covering the sensor approx. 0.5 s, when uncovering the sensor approx. 1.0 s
Operating conditions		
Installation conditions		
Installation position		see section mounting position
Process conditions		
Process temperature		-40 ... 150 °C (-40 ... 302 °F)
Medium pressure limits		-1 ... 25 bar max. working pressure 25 bar, burst pressure 100 bar
Thermal shock resistance		max. 120 K
State of aggregation		solids
Solid contents		≤ Ø25 mm
Bulk density		≥ 200 g/l, not fluidised
Ambient conditions		
Ambient temperature		-40 ... 70 °C (-40 ... 158 °F)
Storage temperature		-40 ... 85 °C (-40 ... 185 °F)
Mechanical specifications		
Degree of protection		IP66/IP67, NEMA 4X
Connection		gland M20 thread G1/2, NPT1/2
Material		F16 housing: PTB-FR, cover with transparent glass made of PA12, EPDM cover seal F18 housing: aluminum EN-AC-AiSi10Mg, plastic coated cover seal: EPDM process connections, sensor: stainless steel 1.4435/316L

Technical Data

Mass		device with F16 housing, electronic insert FEM24 (WA) and R1 thread: approx. 1.0 kg
Dimensions		max. Ø85 mm (3.3 inch), length 372 mm (14.6 inch)
Process connection		thread R1, R1-1/2 acc. to DIN 2999 thread 1-1/4 - 11-1/2 NPT, 1-1/2 - 11-1/2 NPT acc. to ANSI B 1.20.1
Data for application in connection with hazardous areas		
EU-type examination certificate		see instruction manuals
International approvals		
IECEx approval		see instruction manuals
General information		
Supplementary documentation		technical information (TI) manuals, brief instructions (BA, KA) instruction manuals

Type Code

This overview does not mark options which are mutually exclusive.


L	V	L	-	B	1	-	(1)	-	(2)	(3)	A	-	(4)
LVL		Device											
LVL		Vibration limit switch											
B1		Design											
B1		Compact device											
(1)		Process connection											
Thread													
N3		NPT1-1/4, ANSI, 1.4435/316L											
N5		NPT1-1/2, ANSI, 1.4435/316L											
R3		R1, DIN 2999, 1.4435/316L											
R5		R1-1/2, DIN 2999, 1.4435/316L											
XX		Special version											
(2)		Housing, cable entrance											
A6		Aluminium housing F18, IP66/IP67, NEMA 4X, cable gland M20											
A7		Aluminium housing F18, IP66/IP67, NEMA 4X, thread NPT3/4											
A8		Aluminium housing F18, IP66/IP67, NEMA 4X, thread G1/2											
C2		Polyester housing F16, IP66/IP67, NEMA 4X, cable gland M20											
P4		Polyester housing F16, IP66/IP67, NEMA 4X, thread G1/2A											
Q3		Polyester housing F16, IP66/IP67, NEMA 4X, thread NPT1/2											
(3)		Electrical output											
E5		FEM22, 3-wire, PNP, 10 V DC to 45 V DC											
WA		FEM24, relay, DPDT, 19 V AC to 253 V AC, 19 V DC to 55 V DC											
A		Additional equipment											
A		Basic version											
(4)		Approval											
NA		Version for non-explosion-hazardous area											
EX		ATEX II 1/2D Ex ta/tb IIIC T135°C Da/Db											
CU		CSA General Purpose, CSA C US											
IK		IECEx Ex ta/tb IIIC T135°C Da/Db											

Connection

Electronic insert FEM22 (E5)

Three-wire DC connection

- preferred in conjunction with programmable logic controllers (PLC), DI modules as per EN 61131-2
- positive signal at electronics switch output (PNP)
- Output blocked at level limit.

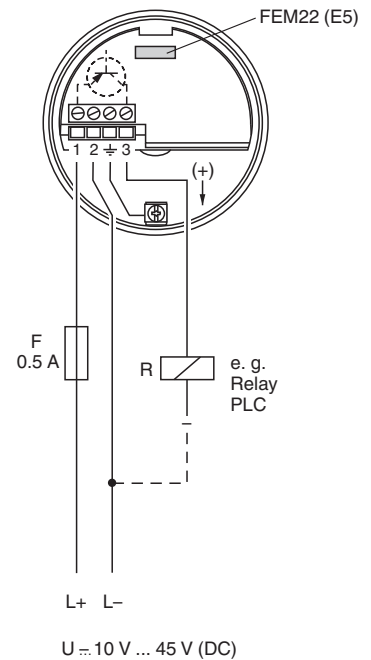


Electronic insert FEM24 (WA)

Universal current connection with relay output

- Power supply:
Please note the different voltage ranges for AC and DC.
 - When connecting a device with high inductance, provide a spark arrester to protect the relay contact.
- A fine-wire fuse (depending on the load connected) protects the relay contact in the event of a short-circuit. Both relay contacts switch simultaneously.
DPDT (double pole double throw)


* When jumpered, the relay output works with NPN logic.

** see "Connectable load"

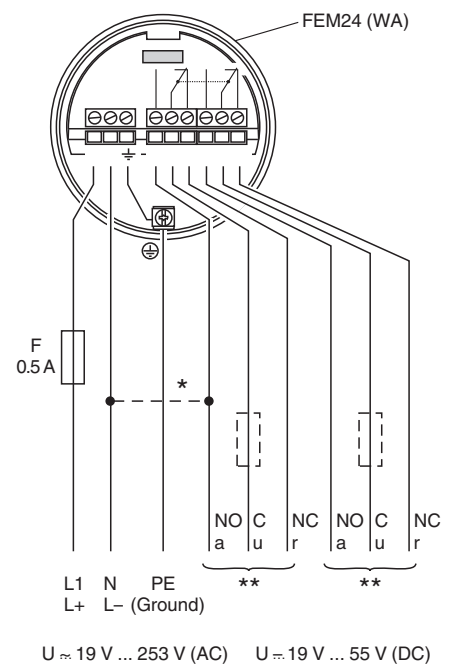

Mounting

Mounting position

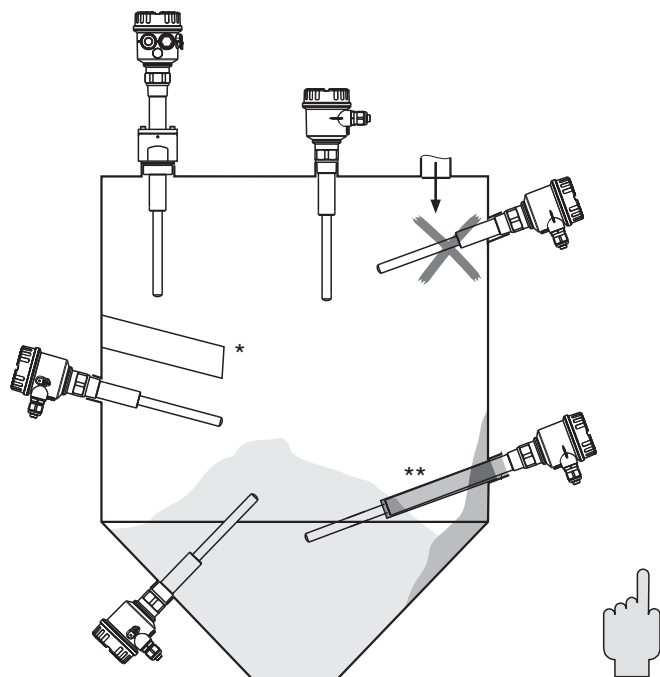

Horizontal installation/vertical installation
* with protective cover (to be provided by customer)
** with protecting tube (to be provided by customer)

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижегород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(727) 345-47-04

Беларусь +(375) 257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: phb@nt-rt.ru || сайт: <https://pepperl-fuchs.nt-rt.ru/>